


Hole Saw Inserts

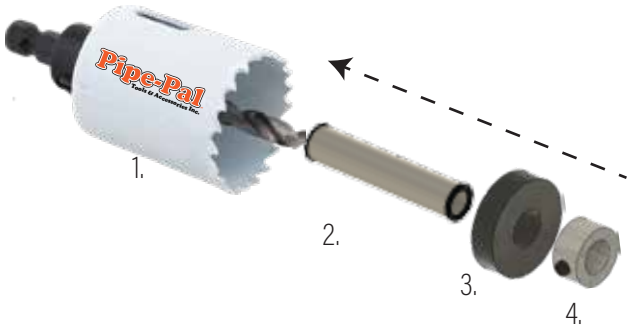

Instructions:

1. Insert desired sized Holesaw on arbor.
2. Please standoff sleeve on drill bit (Figure 1).
3. Place insert that fits cut hole size on drill bit (Figure 2).
4. Insert and tighten drill stop onto drill bit (Figure 3), (uses 2.5mm Allan Wrench (included)).

- Re-establishes the original center point.
- Cleanly & accurately enlarge smaller holes.
- Reduces risk of skating (damage to finished material).
- Works best with 1-3/4" deep hole saw cups.
- Available in all hole saw sizes.

This kit includes:

3/4"-19mm, 7/8"-22mm, 1"-25mm, 1-1/8"-29mm, & 1-1/2"-38mm inserts, 1-3/4" standoff (fits 1/4"/7mm drill bit), 7mm stainless steel drill stop & 2.5mm Allen wrench.

*Always lockout/de-energize your drill when inserting/removing inserts/accessories.

*Always wear proper/required PPE when using powered tools.

**Holesaw/Arbor not included.



Also available: Pipe/Conduit Spacing tools and inserts.



www.pipe-pal.com

